



Height, slope and vertical angle measurements made easy! A clinometer can be used to measure heights of trees, poles, towers, and buildings. You can also use it to measure slopes for preliminary surveying, grade work, and site drainage. Vertical angles can be measured as well for engineering and surveying projects, satellite and microwave dish installation and more. The following pages include instructions for using clinometers in various situations.

- 43830** Percent and degree scales ($\pm 150\%$, $\pm 90^\circ$). Cosines to 45° on back.
- 43895** Percent and topographic scales ($\pm 150\%$, $\pm 200'$ @ $66'$ baseline). Percent/degree conversions on back.
- 43904** Percent and degree scales with built-in rangefinder, target for $50'$, $100'$ baselines. Cosines to 45° on back.
- 43831** Percent and degree scales with built-in light. Cosines to 45° on back. Battery included.
- 43896** Degree and topographic scales ($\pm 90^\circ$, $\pm 200'$ @ $66'$ baseline). Cosines to 45° on back.
- 43893** Degree and topographic scales with built-in rangefinder, target for $66'$, $132'$ baselines ($\pm 90^\circ$, $\pm 200'$ @ $66'$ baseline).
- 43897** 15m and 20m scales ($\pm 35\text{m}$ @ 15m baseline, $\pm 50\text{m}$ @ 20m baseline, respectively). 20m scale/degree conversions on back.
- 43877** 15m and 20m scales with built-in rangefinder, target for 14m and 20m baselines. ($\pm 35\text{m}$ @ 15m baseline, $\pm 50\text{m}$ @ 20m baseline, respectively). 20m scale/degree conversions on back.
- 43840** Percent and secant scales* ($\pm 150\%$, secant values $\times 100 - 100$ to ± 500). Percent/degree conversions on back.
- 43832** Degree and secant scales ($+90^\circ$, cosines 0 to 45°).

Note: Since 43840 and 43832 secant scale clinometers express secant of a slope times 100, you should initially divide the clinometer reading by 100 to get the correct secant value. For example, a clinometer reading of 110 has a correct secant value of 1.10.

*Secant scale clinometer 43840 allows you to determine correct horizontal distances and compensate for slope when using the percent scale for height measurements. You can also eliminate prism rotation in point sampling.

TECH TIPS

1-800-813-2439

Technical Support 1-800-430-5566

If you need more information or would like advice from an experienced professional, call our Technical Support team.

Sales Department 1-800-647-5368

Our friendly Sales Department will gladly fax you an order form, update you on pricing, or take your order over the phone.

Online Sales

For credit card and open account orders, visit our web site to place your order at www.forestry-suppliers.com.

Forestry Suppliers, Inc. accepts Visa, MasterCard and American Express.

Forestry Suppliers, Inc.

Starting out as a small forestry supply company in 1949, **Forestry Suppliers, Inc.** now serves a variety of resource management professions worldwide. Today's Environmental Science, Agriculture, Engineering, Education, and Forestry professionals count on us for the specialty items they use everyday. and we deliver

Our annual catalog features thousands of quality instruments and supplies for your professional outdoor needs. Best of all, just like our fax on demand service, our catalog is absolutely **FREE** and only a toll-free phone call away.

To discover everything **Forestry Suppliers, Inc.** has to offer you, call **1-800-360-7788** and request your **FREE** copy of our current catalog. Call today!



DETERMINING HEIGHT USING A PERCENT SCALE CLINOMETER

To acquire height measurements with a percent scale clinometer, stand any convenient horizontal baseline distance from an object in which you can see both the top and bottom of the object. Then sight the top of the object for the top % reading and the bottom of the object for the bottom % reading.

Then follow this simple mathematical formula to calculate the height:

% to top - % to bottom = total % height

then

total % height x horizontal baseline distance = height.

Note the following examples as they relate to different ground circumstances and horizontal baseline distances:

Height measurements on level ground and above a tree.

Using the percent scale and horizontal baseline distance convenient for you to see both the top and bottom of the tree, follow these simple procedures. Back away from the tree the baseline distance. In this example, 80'. Sight the top of the tree and read the % scale (63%). Sight the bottom of the tree and read the % scale (-7%). Subtract the bottom reading from the top reading: 63% - (-7%) = 70%. To obtain tree height, simply multiply this percentage times your horizontal baseline distance. 70% x 80' = 56' tree height. (See Figure 1.)

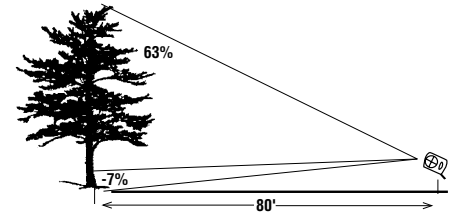


Figure 1

Height measurements on sloping ground and below the tree.

Using the percent scale and 100' horizontal baseline (or other baseline convenient for you to see both the top and bottom of the tree), follow these simple procedures. When the base of the tree is ABOVE eye level, sight the top then sight the base. Subtract the base reading from the top reading. This example: 70% - 14% = 56%. Then multiply 56% x 100' = 56' (tree height). (See Figure 2.)

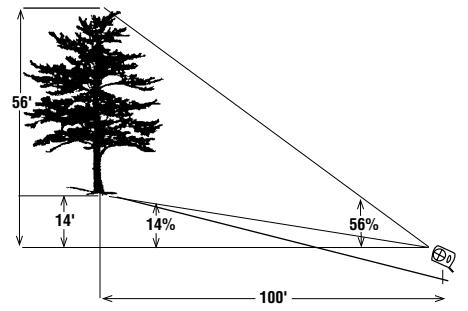


Figure 2

When the base of the tree is BELOW eye level, sight the top then sight the base. Subtract the bottom reading from the top reading. For example, -10% top reading - (-66% bottom reading) = 56%. Then multiply by 100' (baseline) for a tree height of 56'.

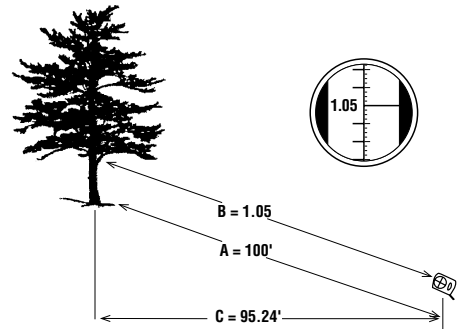


Figure 3

USING A SECANT SCALE CLINOMETER TO DETERMINE:

Horizontal distance on sloping ground.

To find an unknown horizontal distance (C), divide the measured slope distance (A) by the secant value of the slope (B). This example: 100 ft. ÷ 1.05 = 95.24 ft. (horizontal distance). (See Figure 3.)

Correct slope distance for a desired horizontal distance.

Correct slope distance (C) is determined by multiplying the required horizontal baseline distance (A) times the secant value of the slope (B). This example: 100 ft. x 1.05 = 105 ft. (correct slope distance). (See Figure 4.)

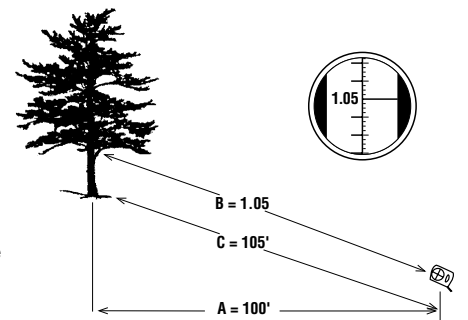


Figure 4

**USING TOPOGRAPHIC & METRIC SCALE
CLINOMETERS TO MEASURE HEIGHT**

The topographic scale clinometer is designed to measure heights directly in feet when using a horizontal baseline of 66'. Take readings the same way described for the percent scale clinometer. The topographic scale can also be used at a horizontal baseline of 33' or 132', but the reading must be halved or doubled, respectively.

The metric scale clinometer is used much the same as the topographic scale clinometer, in that they both read directly when at the horizontal baseline distance prescribed for them. The metric scale clinometer reads heights directly in meters.

CLINOMETER SCALES

Each clinometer has two scales which are available in the following combinations: Percent and Degree, Percent and Topographic, Degree and Topographic, 15m and 20m, Percent and Secant, or Degree and Secant. Scales are graduated from 0-90° in 1° units; from 0 to 150% in 1% units (0 to 70%) then in 2% units (70% to 150%). Graduations in the topo scale are 0 to ±200' with a 66' baseline. Scale readings can be estimated to 10 minutes or 1/5%, when readings are made around the zero level.

Measuring Slope

To measure slope, using a percent scale clinometer, sight parallel with the ground (upslope or downslope) to a target, aiming at a point on the target that is equal to the height of your eye above the ground.

Which Scale to Use:		
Clinometer Scale Used	Required Baseline Distance	Clinometer Reads In
Topo	66 feet	feet
15m	15 meters	meters
20m	20 meters	meters
Percent	Any distance in feet, yards, or meters	% of baseline distance you select

Clinometer Basics

How to hold and read a clinometer

Keep both eyes open when using a clinometer. Use the sight eye to look through the lens at the scales while the left eye



sights alongside the clinometer housing. An optical illusion is created and the horizontal sighting line will appear to project to the side of the clinometer housing. Place this sighting line on your target and read the scale.

Important Notice

The axes of the eyes of some people are not parallel, a condition called heterophoria. In order to be sure that this doesn't affect the accuracy of readings, it is suggested that the operator check this possibility as follows:

Take a reading with both eyes open and then close the eye not looking directly into the clinometer scales. If the reading doesn't change appreciably, there is no disalignment of the eye axes, and both eyes can be kept open.

Should there be a difference in the readings, one has to keep the eye not looking directly into the clinometer scales closed and sight partly past the instrument body making use of the optical illusion.

